

"66" showing on the display means the machine is in Vend Arm Control mode.  
Turn off DIPSW 3-8 and reboot the machine, and then everything should work properly.