
SMART 3 IN 1 HOLLYWOOD PHOTOS: SETTING YOUR BOOTH TO REBOOT AUTOMATICALLY




Start the Hollywood Photo Booth program



Right-click the mouse anywhere on this opening screen and select "Setup"

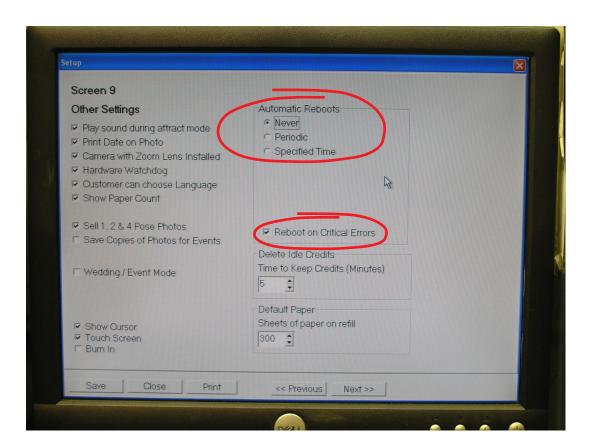


Click "Next" until you reach Screen 9. Look on the right side of the screen to the menu called "Automatic Reboots". The default setting will be "Never", with the "Reboot on Critical Errors" check box also selected.

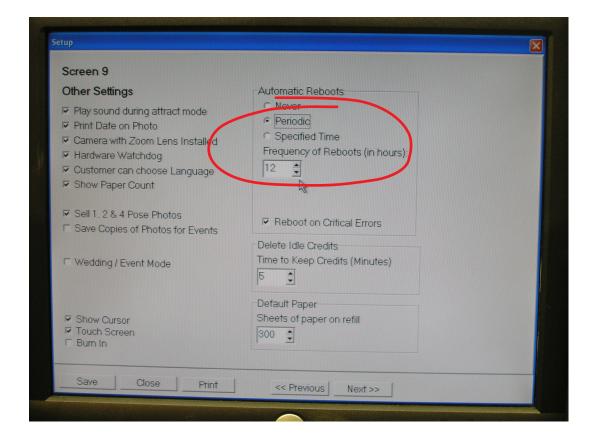


To make sure your booth will reboot periodically to clear its memory and run smoothly, you have two options.


OPTION #1:
Select "Periodic"
and select how
often you would
like the booth
to reboot. "12"
means it will
reboot every 12
hours, which is the
minimum amount
recommended.

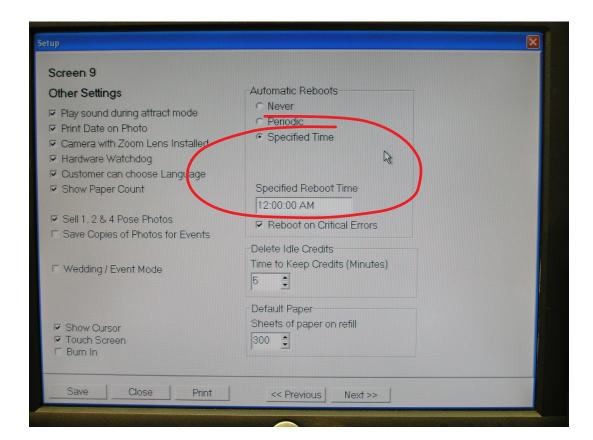


OPTION #2: Select "Specified Time" and select the exact time you would like the booth to reboot.

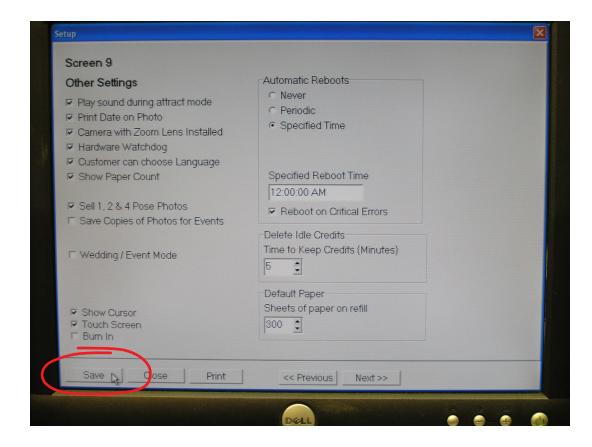

When you have made your selections, click "Save" in the lower left corner.

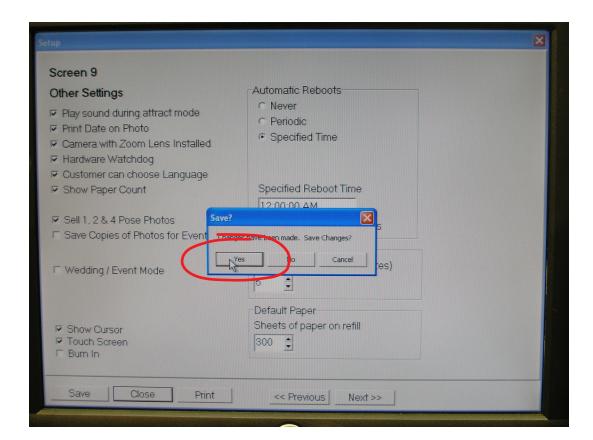

Click "Yes" to save your changes, then click "Close" to exit the Setup menu.

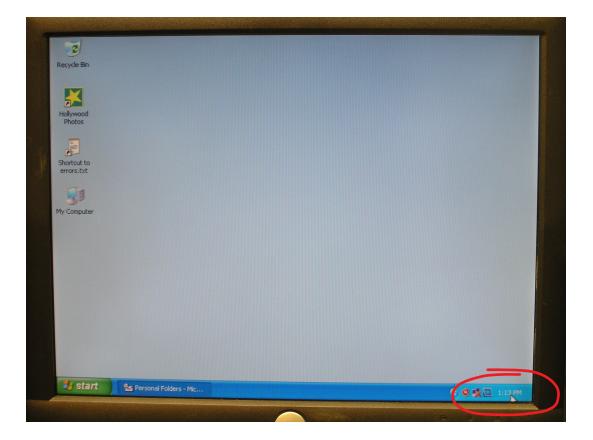

If you chose Option #2 (Reboot at Specified Time), make sure your computer's clock is set to the correct current time in your area, so the booth will reboot when you expect it to.

Restart your computer to ensure these changes have taken effect.